#### 6ft Tracer Bar 3.9 Manual



#### **POWER REQUIREMENTS**

67W @ 24VDC
One Class 2 LED driver required.
DO NOT CONNECT DIRECTLY TO LINE VOLTAGE!


#### **MOUNTING**

Single junction box centered on the fixture. Two standalone aircraft cables spaced 48" apart. Fixture weighs less than 20 pounds.


#### **TECHNICAL SUPPORT**


Need help styling the rope? Scan the QR code to view the fixture in 3D! Call us at the number below if you need help.




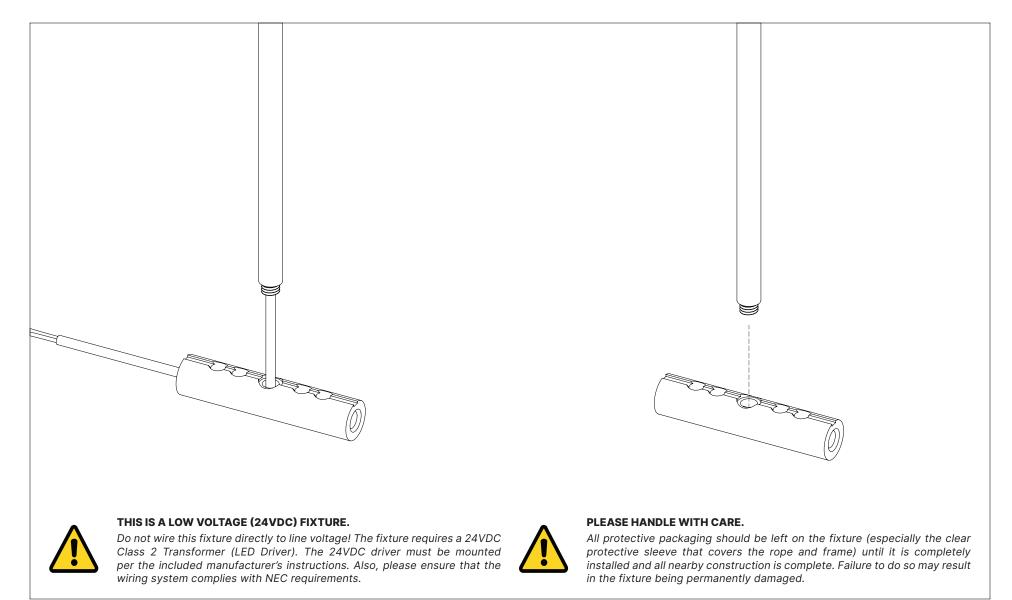



### LUKE LAMP CO.

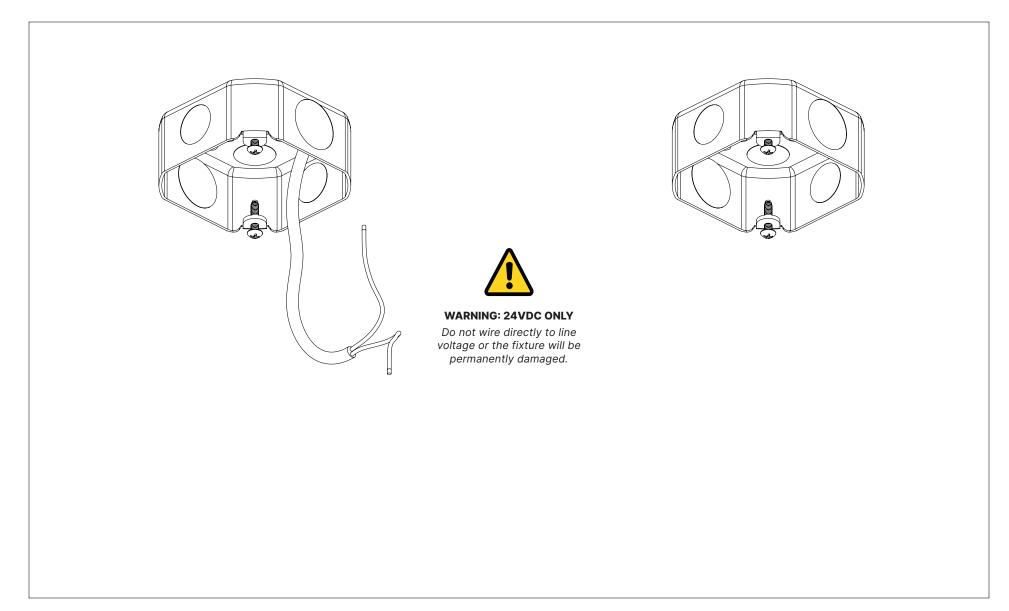


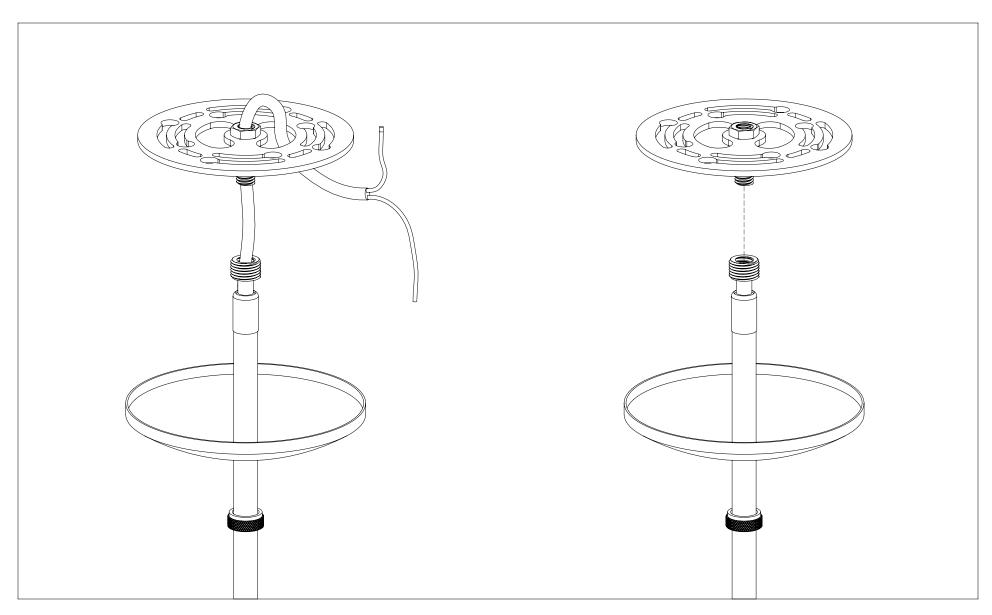

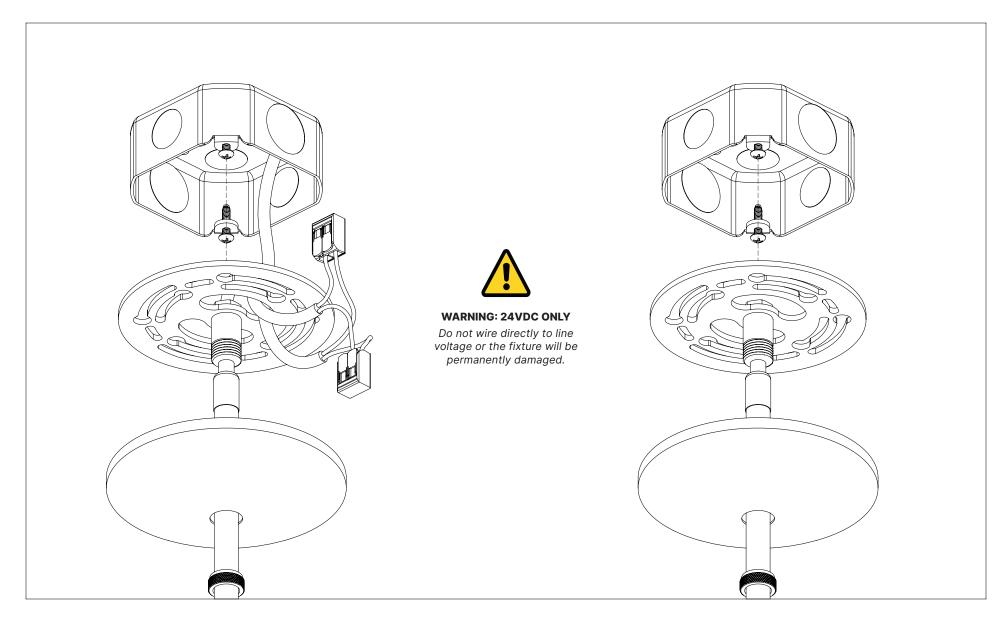


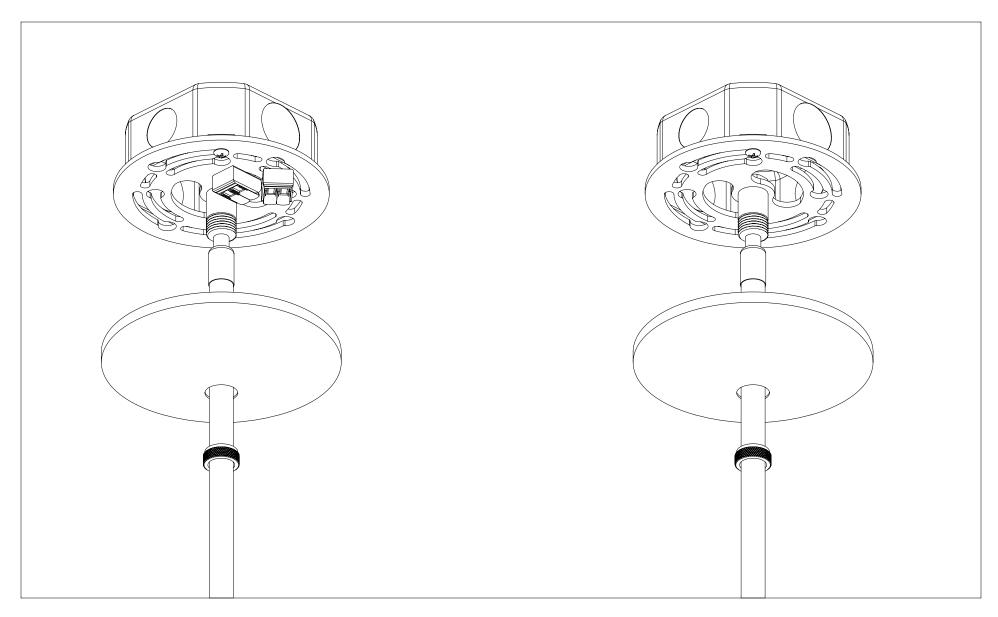

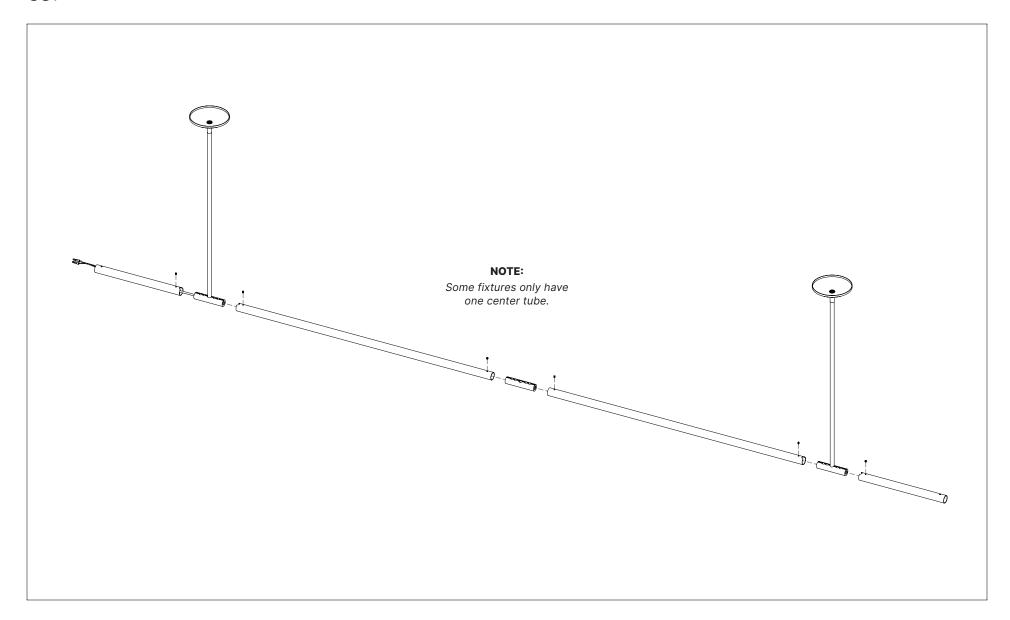

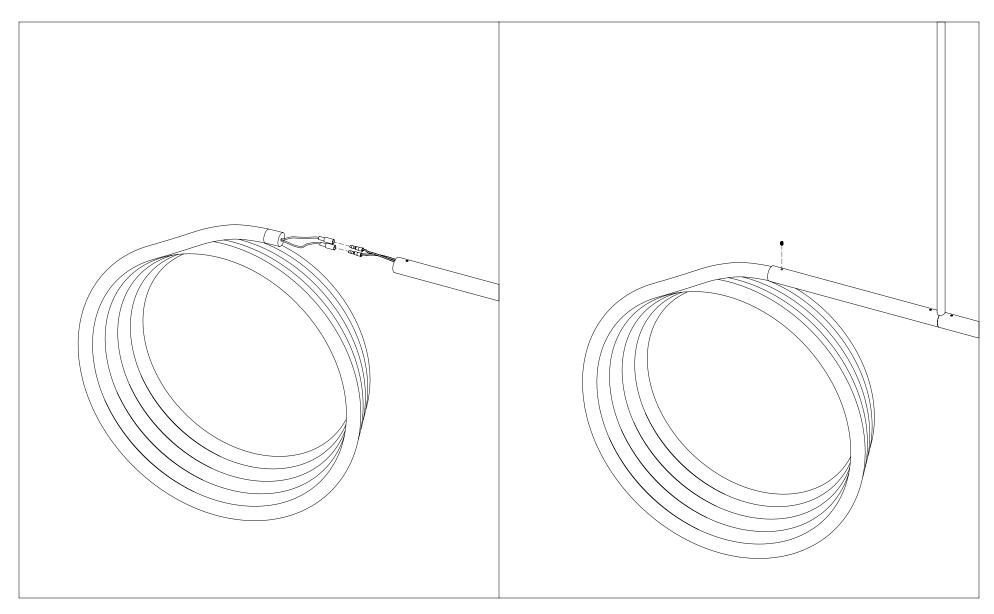

### LUKE LAMP CO.

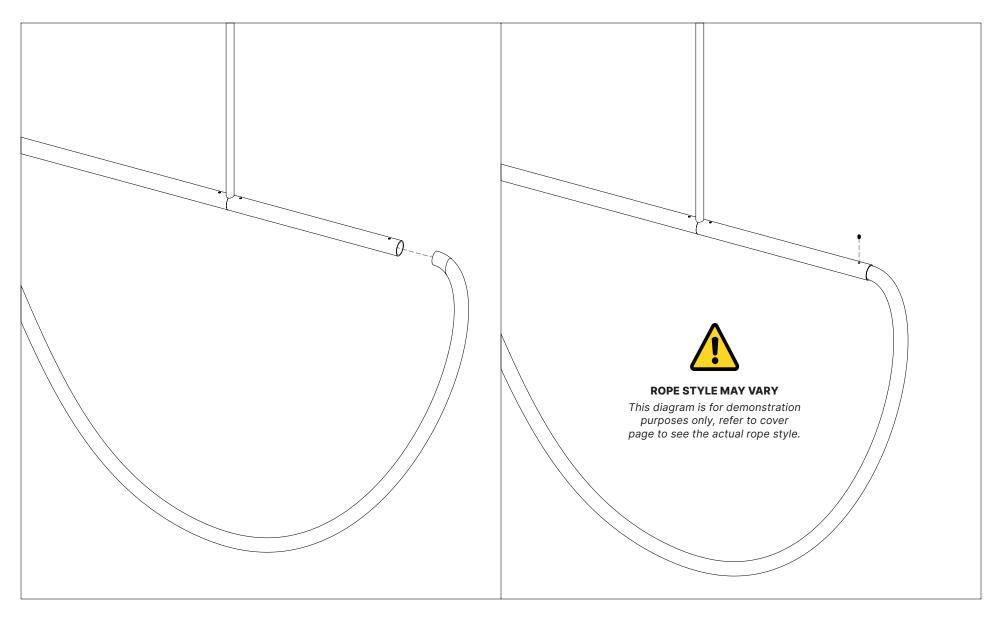

## LUKE LAMP CO.

# Vertical Rod Cutting Guide

	Carefully Cut Rod Sleeve To Desired Length	If the vertical rods need to be shortened, first cut the outer sleeve to the desired length. Make sure to cut very carefully so that you do not damage the finish.  For helpful videos, visit: lukelampco.com/videoresources
	Cut Threaded Rod 1/2 inch Longer Than Rod Sleeve	Next, cut the threaded rod 1/2 inch longer than the rod sleeve.
<b>.</b> .	Threaded Rod Protrudes 1/4 inch On Both Ends	Finally, insert the threaded rod into the rod sleeve. The threaded rod should protrude 1/4 inch at both ends. Reattach the hang-straight joint and proceed with installation.

# Rope End Insertion Depth

